

HEALTH & SAFETY - GLAZING REGULATIONS

IMPORTANT INFORMATION

The Workplace (Health Safety and Welfare) Regulations 1992 Regulation 14

Scope

The Workplace (Health Safety and Welfare) Regulations 1992 came into force on **January 1st 1996**. Regulation 14 imposed on those responsible, a duty to undertake a risk assessment of their glazing in *critical locations* to identify any glass that could create a risk of injury to the buildings users or visitors. If this identified glass was determined to not being of a sufficient safety standard then action must be taken to prevent such injury. Many organisations undertook remedial actions at this time and in the preceding years. However it has been shown that a large number of organisations including Colleges, Schools, Hospitals and other Government buildings as well as a large part of the Commercial sector have ignored this legislation.

With avoidable accidents and injuries from glass still happening it is clear that both those that had carried out assessments over ten years ago and those who so far have done nothing need to review their current situation.

It is a sad but true fact that we are increasingly living in a 'blame culture' and those who choose to ignore **the law** not only face prosecution in the event of an accident but the possible devastating effect of a civil action.

The Regulation

Since the introduction of these Regulations there has been a lot of confusion as to what actually the Regulation requires and how to go about conformance.

Regulation 14 actually states;

Every window or other transparent or translucent surface in a wall or partition and every

'transparent or translucent surface in a door or gate shall, where necessary for reasons of health and safety: be of safety material or be protected against breakage of the transparent or translucent material and... be appropriately marked or incorporate features so as, in either case to make it apparent.'

The First Steps to Compliance

- Initiate a risk assessment of your glazing is undertaken to ascertain whether or not there is a risk of injury. (Recommendations can be found in BS6262 Part 4).
- Determine the type of glass and its safety rating within those critical locations.
- Create a detailed report of work to be undertaken so that all glazing identified as unsafe for its location will be upgraded.
- Ensure that both the assessment and the schedule of work are fully documented.
- Instigate a programme to monitor and review the current situation on a regular basis. (Ensure the schedule of work is completed and any subsequent reorganisation does not create a new potential risk).

Critical Locations

The recommendations for 'Critical Locations' are recognised (from BS6262 Part 4) as;

Risk Code 1 Panels in doors and panels next to doors (within 300mm) up to 1500mm from finished floor level.


Risk Code 2 Low Level Panels within 800mm from finished floor level.

Risk Code 3 Glazing in Balustrades

Risk Code 4* Glazing in Wet Areas

Risk Code 5** Areas of Special Risk

It must be noted that Risk Code 1 is no more severe than Risk Code 5

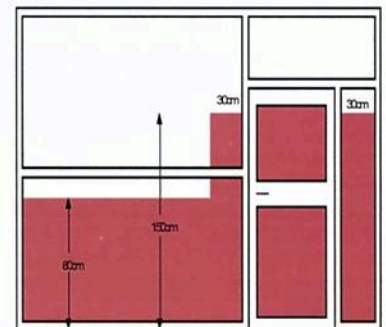

***Glazing in Bathing Areas** – any glazing forming part of a bath or shower screen, or located adjacent to, or surrounding a bath, swimming pool, or other associated wet area constitutes a potential danger because of the possibility of a slip accident.

****Areas of Special Risk** – In all those parts where the planned activity generates a special risk for example indoor sports facilities, all glazing should conform to the requirements for critical locations. In these situations a higher classification requirement should be considered and if additional safeguards such as protective screens or manifestation is required.

Exceptions

Small Panes – ordinary annealed glass may be used in small panes up to a maximum width of 250mm and an area not exceeding 0.5 sq metres. Such glass must be not less than 6mm in thickness except in the case of traditional leaded lights and copper lights where 4mm can be used.

Robustness – robustness refers to the strength of the glazing that forms fronts to non domestic buildings. Some glazing such as polycarbonate is inherently strong. Annealed glass that does not normally comply with EN 12600 can gain robustness with increased thickness.

Permanent Screen Protection – if glazing in a critical is protected by a suitably designed protective screen these recommendations do not apply

Upgrading of Non Conforming Glass

Use a 'safety material' [including safety film] which, if it breaks, breaks safely as defined in EN12600⁺ (which now supersedes BS6206 as the standard Impact Test)

- b) Use inherently robust materials.
- c) Use ordinary annealed glass of an approved thickness.
- d) Provide permanent screen protection.
- e) Remove the risk by reorganising activities in the vicinity of the glazing.

+ The classification of EN 12600 is as follows;

$\alpha\beta\Phi$

Where:

α is the drop height at which the product either did not break or broke safely.
 β is the mode of breakage of the material.
 Φ is the drop height at which the product did not break or broke in the fashion of laminated glass (ie level of containment provided)

Review of Previous Solutions

In the early days of the legislation many organisations only considered Risk Codes 1 and 2 as it was believed that these gave the greatest risk. However it has since been recognised that glazing in all the 'critical' locations can be of equal risk.

The most common upgrading method used was the installation of a safety window film.

Few organisations realise that this type of protection does have both a warranty period (in 1996 the standard warranty was 5 years) and a 'useful' lifetime (again films from 1996 would be expected to have a lifetime of around 10 years). There is a test method available which can indicate how well existing film installations can be expected to perform. (For details please contact Shield (UK) Limited Priory Gate House 7 Priory Road High Wycombe Bucks HP13 6SE Tel: 0800 3282436

However the biggest single problem that most organisations encounter is that the original assessment made was not detailed enough for today's needs. In many cases people just listed the work that needed undertaking. The assessment needs to be fully documented so that a continuous review can be undertaken to ensure that any changes to either the glazing or the use of the area do not create a new risk.

The Way Forward

The way forward is quite straightforward. The essential first step is to undertake a new full glazing audit to identify the types and characteristics of glass in critical locations. This gives you all the information required to produce a full risk assessment taking into account all of the above factors. It should be documented in such a way that there is a fully documented risk assessment and a separate schedule of work to be carried out to avoid any confusion. The Risk Assessment should be in such a format that makes it simple to check that the glazing continues to comply with the Regulations.

Safety Film Specification

When using a Safety Film (Safety Films are tested to the same level and in the same way as Safety Glass) to upgrade glazing there are two recognised levels of protection. Whilst the requirement for glass safety in 'critical locations' is EN12600 Class 3 (other than in doors of greater than 900mm width which requires Class 2) the standard 100 micron film will meet Class 2 when installed on 4 or 6mm glass [whether in a double glazed unit or not]. However also available is a 175 micron Safety Film which meets EN12600 Class 1. This may be more appropriate where the requirement is more robust in places such as Sports Halls or glazing in playground areas.

The standard safety films are clear and when installed professionally should be difficult to detect. However all glazing in Critical locations should be marked to indicate it is a 'safety material'. The marking on safety film should be installed onto the film in label form but in such a manner that it is not removable. The label should be approximately 25mm in diameter and include the information as shown on the example label below.



Shield's Safety Films are also available in a 'solar control' version. This type of film not only gives the safety performance required but also will dramatically reduce energy usage, solar heat gain and glare.

For further information or to book a Glazing Audit please contact:

Shield (UK) Limited

Priory Gate House, 7 Priory Road, High Wycombe, Bucks HP13 6SE
Telephone: 0800 3282436 Fax: 01494 473938

info@shield-uk.com